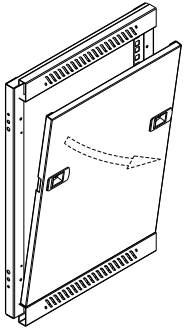# 19" FLAT PACK RACK CABINET
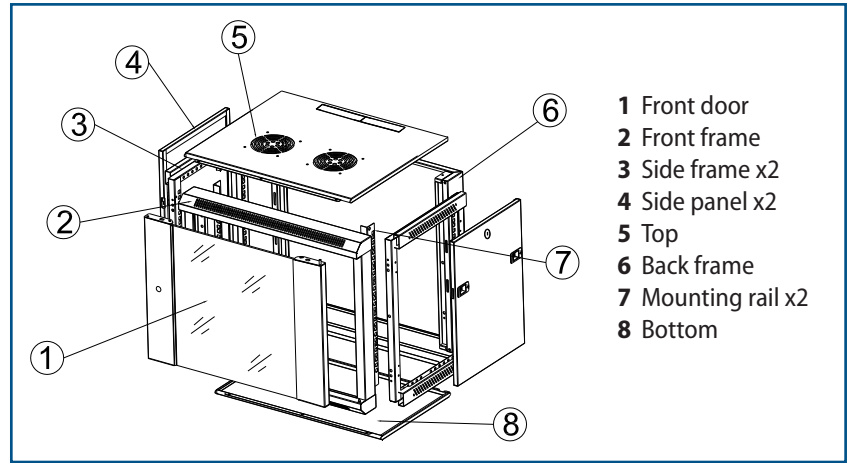## ASSEMBLY INSTRUCTIONS

1 Front door
2 Front frame
3 Side frame x2
4 Side panel x2
5 Top
6 Back frame
7 Mounting rail x2
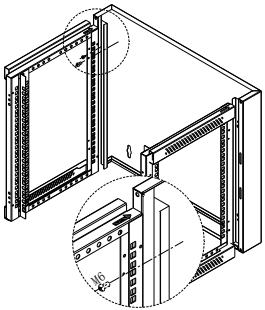8 Bottom

1 Remove the side panels (**4**) from the side frames (**3**) and set them aside.
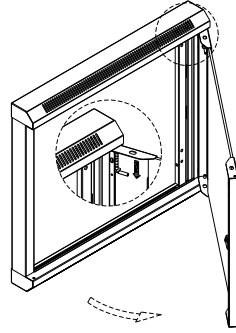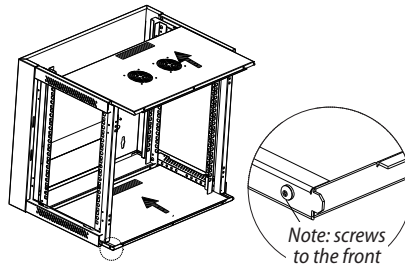
2 Use the included key to pull open the door (**1**) and remove it from the front frame (**2**) by pushing down on the latch.
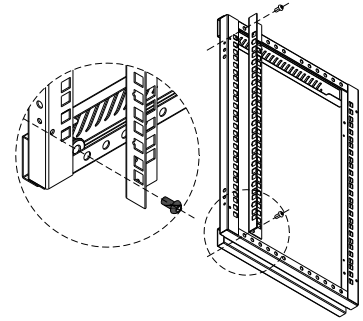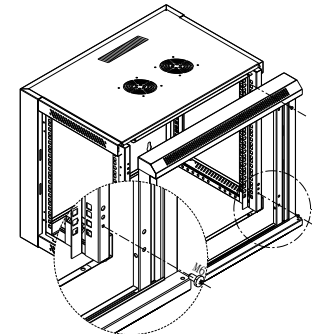
3 Use the 4 included M5 screws to attach a mounting rail (**7**) to each side frame (**3**).
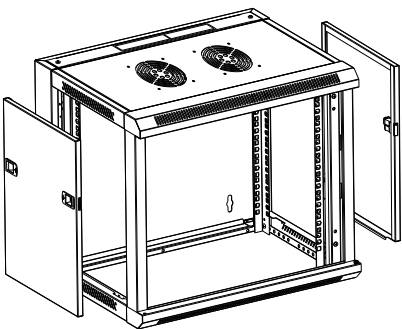
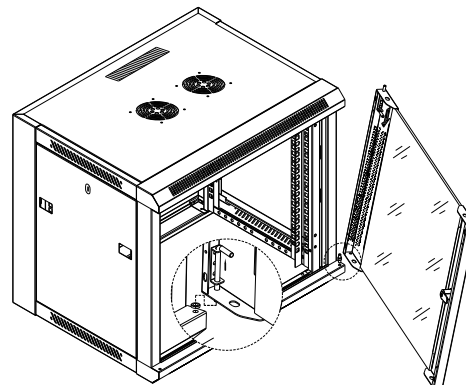**4** Use 4 of the included M6 screws (use 6 for larger units) to attach each of the 2 side frames (**3**) to the back frame (**6**).

5 Slide the top (**5**) and the bottom (**8**) into place.

Note: screws to the front

6 Use 4 of the included M6 screws (use 6 for larger units) to attach the front frame (**2**) to the assembly.

7 Install the 2 side panels (**4**).

8 Reverse Step 2 by inserting the lower door latch into the frame and then pushing down on the upper door latch to install the front door (**1**). Note: Once the unit is assembled, check that all corners are square to ensure that the door opens and closes properly.

✓INTELLINET®
N E T W O R K   S O L U T I O N S